# Digital Snake Scope

Use your spy camera to reveal even the most secret of hiding places. The flexible camera arm lets you look around corners and walls, peer into dark niches, and peek through small openings. The LED light next to the camera lens provides enough light to illuminate even the darkest surroundings, revealing secrets to you in real time on the LCD display. No hiding place is safe from you!

**WARNING!** Not suitable for children under 3 years. Choking hazard small parts may be swallowed or inhaled.

WARNING! Strangulation hazard — flexible camera arm may become wrapped around the neck.

Do not use for examinations on or in the body of persons and animals.

Do not shine the light into the eyes of people or animals.

Keep the packaging and instructions as they contain important information.

## 1. How your Digital Snake Scope works:

- Have an adult insert the batteries into the device (see step 2 and figure 1).
- Turn the device on by holding the power button for three seconds. Wait until the colored display turns on.
- Adjust the flexible camera arm so that it shows the area that you wish to observe
- If the area is too dark and you don't see much on your screen, turn on the LED light. Now the light will shine directly next to the camera lens.
- If you are in brightly-lit surroundings, you can place the sun shade over the screen to make the screen easier to read.
- When you are done using the device, turn it off to preserve battery life.

**Note!** The camera arm and the camera lens are waterproof, but the LCD screen and battery compartment are not. Be careful to keep the screen, grip, and battery compartment dry!


## 2. How to insert the batteries:

IMPORTANT: An adult should insert and change the batteries.

- Use a Phillips-head screwdriver to loosen the screw on the battery compartment. Lift off the cover. The screw will remain in the cover.
- Remove the old batteries (if applicable), and insert three new AAA batteries (1.5-volt, type LR03). Pay attention to the correct polarity (see figure 1). Close the battery compartment and use the screwdriver to screw the cover back into place.

### Do not mix old and new batteries.

- · Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Batteries are to be inserted with the correct polarity (+ and -). Press them gently into the battery compartment. (figure 1).
- Non-rechargeable batteries are not to be recharged. They
- · Rechargeable batteries are only to be charged under adult supervision.
- Exhausted batteries are to be removed from the toy.
- · The supply terminals are not to be short-circuited
- · Dispose of used batteries in accordance with environmental provisions, not in the household trash.
- Avoid deforming the batteries
- Do not leave the device in direct sunlight or expose it to other sources of heat.
- IMPORTANT! Protect the device (excluding the waterproof camera and arm) from moisture. Clean it with a damp cloth and allow it to dry thoroughly before using it again.

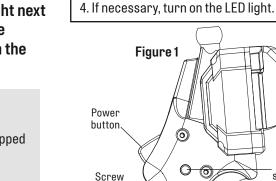

Battery

compartment cover

**Ouick Start:** 

1. Have an adult insert the batteries (see Figure 1).

desired position.

Power

button

Screw

3. Bend the camera arm into the

Figure 1

2. To turn on, hold the power button on the back of the device for three seconds.

Light


switch

Battery compartment

for 3 x AAA batteries (1.5-volt, type LR03)

Correct

battery

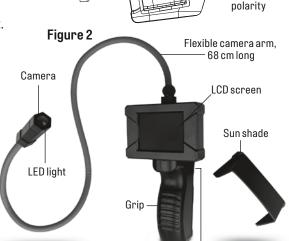

Power button and light switch

# Safety for Experiments with Batteries:

- An adult should insert and change the batteries.
- To operate the device, you will need three AAA batteries (1.5-volt, type LR03), which could not be included in the kit due to their limited shelf life.
- Avoid a short circuit of the batteries. A short circuit can cause the wires to overheat and the batteries to explode.
- Different types of batteries or new and used batteries are not to be mixed.

NOTES ON DISPOSAL OF ELECTRICAL AND ELECTRONIC COMPONENTS

The electronic components of this product are recyclable. For the sake of the environment, do not throw them into the household trash at the end of their lifespan. They must be delivered to a collection location for electronic waste, as indicated by the following symbol: Please contact your local authorities for the appropriate disposal location.

© 2025 Franckh-Kosmos Verlags-GmbH & Co. KG, Pfizerstrasse 5-7, D-70184 Stuttgart, Germany.

© Dynamic Scientific Ltd., 2025

This work, including all its parts, is copyright protected. Any use outside the specific limits of the copyright law without the consent of the publisher is prohibited and punishable by law. This applies specifically to reproductions, translations, microfilming, and storage and processing in electronic systems and networks. We do not guarantee that all material in this work is free from copyright or other protection Layout, typesetting, packaging, and instructions: Michael Schlegel, komuniki, Würzburg

 $Cover illustration: Wolfgang \ Peschke, Peschke \ Grafik \ Design, Ostfildern; Packaging \ insert: @Adobe \ Stock, Al \ Generated \ Peschke, Peschke, Peschke, Peschke, Ostfildern; Packaging \ insert: Ostfildern; Packagin$ 

Thames & Kosmos® is a registered trademark of Thames & Kosmos, LLC.

Distributed in North America by Thames & Kosmos, LLC. Providence, RI 02903 Phone: 800-587-2872: Web: www.thamesandkosmos.com Distributed in United Kingdom by Thames & Kosmos UK LP, Cranbrook, Kent TN17 3HE Phone: 01580 713000; Web: www.thamesandkosmos.co.uk